




## Model 62A08-1 Hi-Fi IR Flasher

### DESCRIPTION

The IR flasher is used for sending IR data to the source equipment. When you point your source equipment remote control at the IR receiver in the Volume-Source Control (VSC) and send a signal, the IR data is routed to the appropriate Remote Input Module (RIM), to which the source is connected, which then sends the IR signal through the IR flasher to the source equipment.

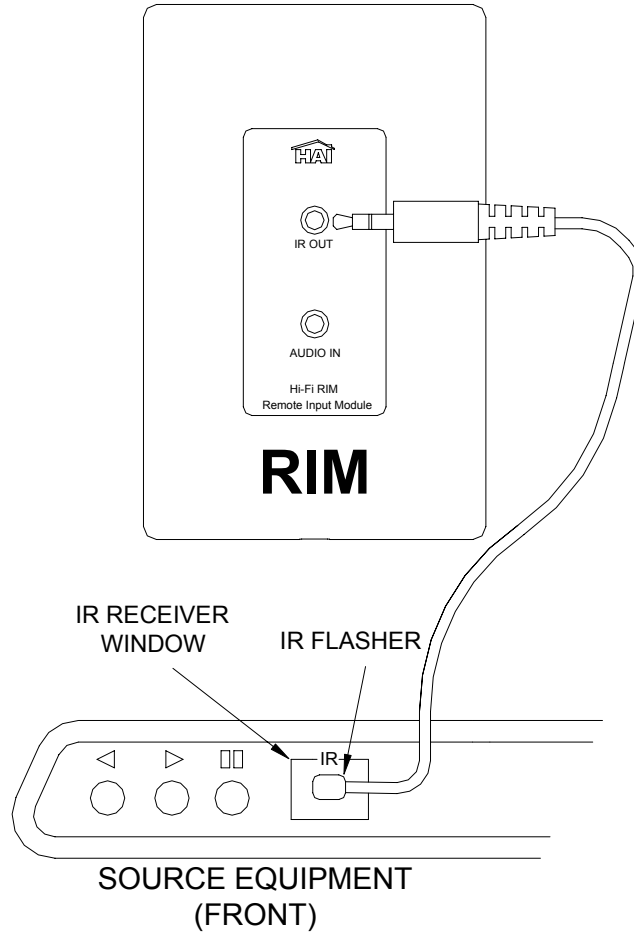

### SPECIFICATIONS

Emitter Output Drive Current: 100mA  
Emitter Output Drive Voltage: 5V